

AIR ADMITTANCE VALVE

Negative Pressure Eliminator
for Unrestricted Sewage System



About Astral Air Admittance Valve

Astral Air Admittance Valves respond to the negative air pressure created in a sewage system when sanitary facilities are used. Sewage flow can produce negative pressure and then water is drawn out of the siphons. Air admittance valves help to provide air supply to the sewage system and thus compensate for negative air pressure. Astral Air Admittance Valves are manufactured with latest European standards and their working temperature range is from -20°C to +60°C.

Features & Key Properties

- Eliminates the generation of negative pressure in the system
- Prevents the spread of sewer gases and bad odours
- Helps to improve the performance of a sewage system – facilitates sewage discharge.
- Eliminates the possibility of water coming out of siphons.
- Reduces investment costs – smaller number of lead-through points in the roofs, not all risers have to be ventilated with a venting device.
- Helps to improve the flexibility of arrangement of sanitary fixtures – enables greater distance between the fixtures and the riser.
- A single product which is suitable for installation on pipes of different sizes.
- In the event of a fire, the valves reduce the risk of fire and smoke spreading via sewage pipes (through the elimination of the stack effect).

Product Range

- Mini – 32 mm to 63 mm (designed for use in branched sections of the sewage system and in small risers)
- Maxi – 75 mm to 110 mm (suitable for use in sewerage risers and branched sections with high flow rate)

Technical Details

Technical Data	Diameter (mm)	
	32-63	75-110
Material	ABS	ABS
Colour	White	White
Air Flow (ltr/sec)	6.1	23.2
Height (mm)	80	108
Working Temp. Range	-20°C to +60°C	
Applicable Standards	EN 12380, EN ISO 3126	

Working Principle

Astral Air Admittance Valves provide air supply and help to compensate negative pressure. When negative pressure is created in the system, the resulting suction power raises the membrane in the valve and thus admits air into the system. As a result negative pressure is fully compensated.



Open



Closed

Air admittance valves help to prevent the spread of sewer gases (unpleasant odours) to outside the pipeline – the valve closes as soon as the membrane falls, thus preventing the diffusion of odours.

Valve Selection

To select an appropriate valve, the level of air supply required for a given sewage system must be determined. The respective guidelines are outlined in national standards and regulations. The most suitable air admittance valve is chosen based on the calculated total waste water flow rate (l/s) and the required air supply level.

Installation

Astral Air Admittance Valves are ideal for installation at the ends of non-ventilated risers and near sanitary fixtures located at a considerable distance from the riser.

50 mm & 90 mm Diameter pipes are to be joined with grooved socket pipe by removing rubber gasket. Other size pipes can be joined with plain end. Please check below images for proper understanding:

Mini



32 mm

Join with plain pipe



40 mm

Join with plain pipe



50 mm

Remove rubber gasket & join with grooved socketed pipe



63 mm

Join with plain pipe

Maxi



75 mm

Join with plain pipe



90 mm

Remove rubber gasket & join with grooved socketed pipe



110 mm

Join with plain pipe

Note: Astral Air Admittance Valves can also be used with Astral Drainmaster & Astral DWV pipes


Packing Details

Item Type	Product Code	Standard Packing (Nos.)	Master Packing (Nos.)
Mini	HYPERAIR-32.63	01	140
Maxi	HYPERAIR-70.110	01	12


Dimensions



**Air Admittance Valve
Maxi (DN 75 - 110)**

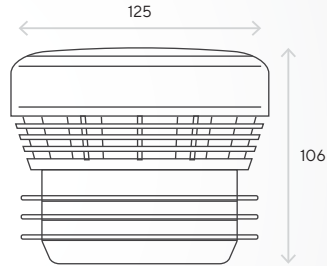

**Air Admittance Valve
Mini (DN 32 - 63)**

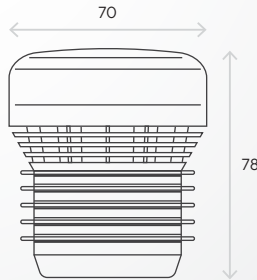

Astral Limited
(Formerly known as Astral Poly Technik Limited)
CIN: L25200GJ1996PLC029134
Registered & Corporate Office:
207/1, 'Astral House', B/h Rajpath club,
off S. G. Highway, Ahmedabad - 380059,
Gujarat, India. P: +91 79 6621 2000
F: +91 79 6621 2121 | W: astralpipes.com

ASTRAL TOLL FREE
1800 233 7957

Please get in touch with us between
10 AM to 6 PM on Monday to Saturday-
except 1st & 3rd Saturday and Public holidays

Branch Offices

Bengaluru	P: +91 80 26643868	E: bengaluru@astralpipes.com
Chennai	P: +91 44 43506384	E: chennai@astralpipes.com
Hyderabad	P: +91 40 27900023	E: hyderabad@astralpipes.com
Jaipur	P: +91 141 2974322	E: jaipur@astralpipes.com
Kochi	P: +91 484 4046050	E: kochi@astralpipes.com

Lucknow	P: +91 522 2728844	E: lucknow@astralpipes.com
Mumbai	P: +91 022 2838 9744	E: mumbai@astralpipes.com
New Delhi	P: +91 11 26168156	E: delhi@astralpipes.com
Pune	P: +91 84461 14455	E: pune@astralpipes.com
Indore	P: +91 731 4946666	E: indore@astralpipes.com
Kolkata	P: +91 33 46021104	E: kolkata@astralpipes.com

